
## **EXPLODED VIEW**

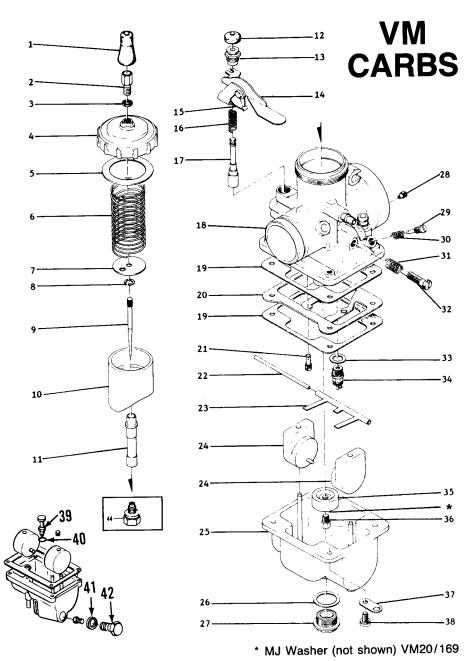

- 1. Rubber Cap, Throttle Cable
- 2. Cable Adjuster
- 3. Locknut, Cable Adjuster
- 4. Top, Mixing Chamber
- 5. Gasket, Mixing Chamber Top
- 6. Spring, Throttle Valve
- 7. Plate, Needle Retainer
- 8. "E" Ring
- 9. Needle

13.

15.

20.

27.

- 10. Throttle Valve
- 11. Needle Jet
- 12. Rubber Cap, Starting System
  - Fitting, Starter System Plunger
- 14. Lever Assy, Starting System
  - Leaf Spring, Lever Positioning
- 16. Spring, Starter Plunger
- 17. Plunger, Starting System
- 18. Body, Mixing Chamber
- 19. Gasket, Float Chamber
  - Baffle Plate, Float Chamber
- 21. Pilot Jet
- 22. Pin, Float Arm Hinge
- 23. Float Arm
- 24. Float
- 25. Float Chamber
- 26. Gasket, Float Chamber Plug
  - Plug, Float Chamber
- 28. Air Correction Jet
- 29. Screw, Air Adjusting
- 30. Spring, Air Adjusting Screw
- 31. Spring, Idle Adjusting Screw
- 32. Screw, Idle Adjusting
- 33. Gasket, Needle & Seat Assy
- 34. Needle & Seat Assy
- 35. Cup, Fuel Retaining
- 36. Main Jet
- 37. Plate, Vent Tube Retaining
- 38. Screw, Float Chamber
- 39. Needle Jet Setter
- 40. Jet Setter O-Ring
- 41. Banjo Bolt Washer
- 42. Banjo Bolt
- 43. Flange O-Ring
  - (For Z/F Carbs Not Shown)
- 44. Guide Screw (38A/S Only)